



Wild-BITs QUICK ASSEMBLY INSTRUCTIONS

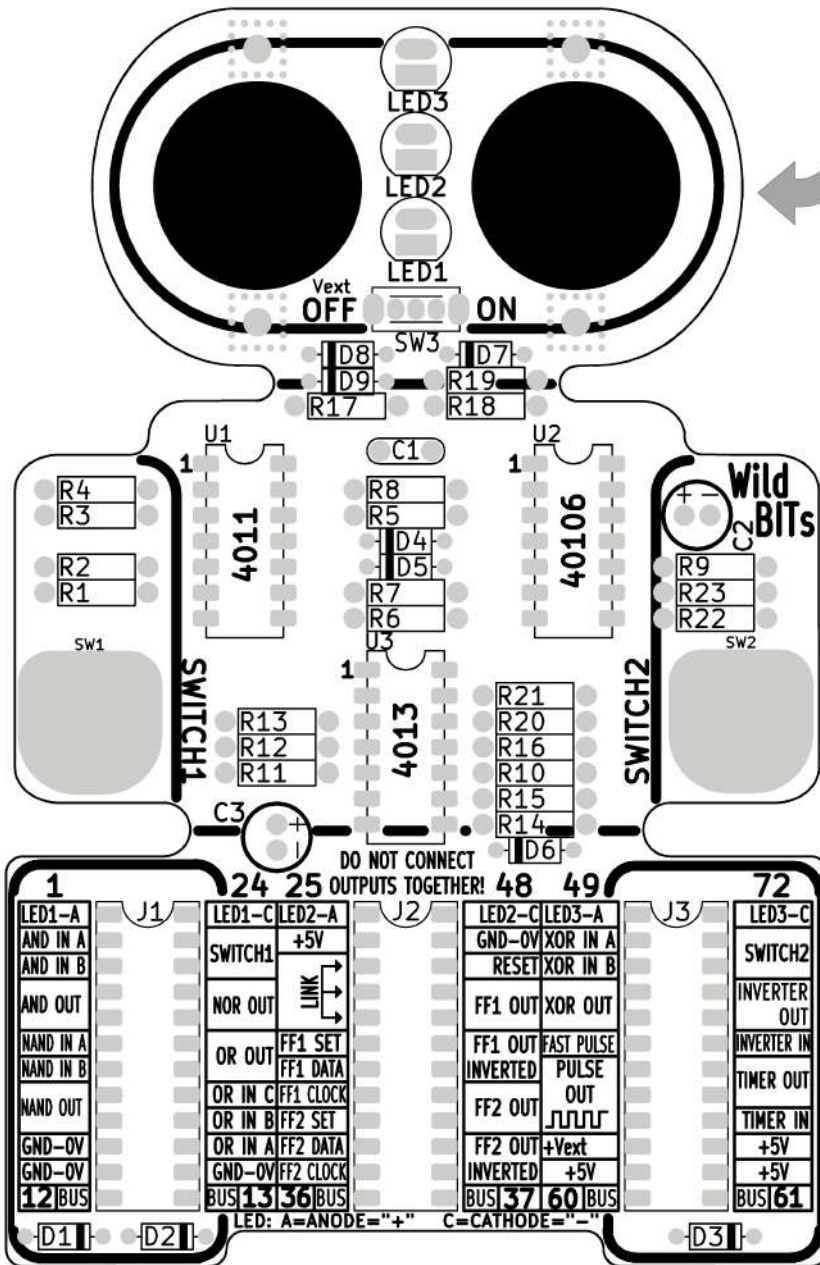





















Place the battery holders such that the batteries will slide in from the sides. You can use a tooth-pick in the holes to keep the clips aligned. Be careful, the holders become very hot!

Wire length	Quantity
75 mm	4
50 mm	6
40 mm	6
30 mm	6
20 mm	4



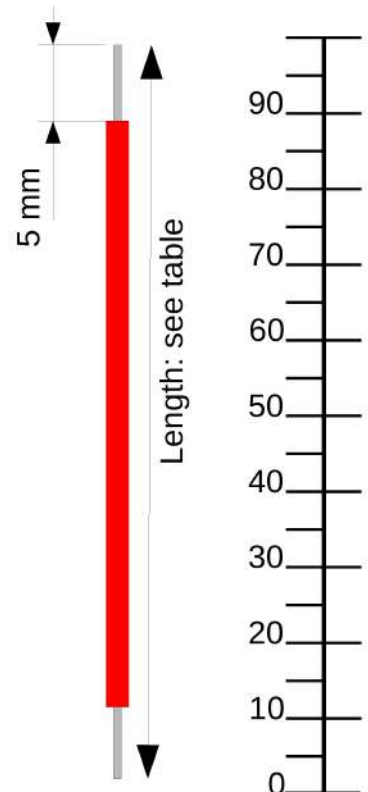


Mount the components in the following order:

- BT1, BT2 – battery holder CR2032 (backside)
- R1....R16 – Resistor 470kOhm (Yellow-Purple-Black-Orange-Brown)
- R17....R20 – Resistor 680 Ohm (Blue-Grey-Brown-Gold)
- R21 – Resistor 390kOhm (Orange-White-Yellow-Gold)
- R22 – Resistor 150kOhm (Brown-Green-Yellow-Gold)
- R23 – Resistor 22kOhm (Red-Red-Orange-Gold)
- D1....D9 – Diode 1N4148 (note the black marking!)
- U1....U3 – IC socket 14 pin (note the notch)
- J1....J3 – IC socket 24 pin (note the notch)
- LED1 – Green 5mm (note the flat side = short pin)
- LED2 – Yellow 5mm (note the flat side = short pin)
- LED3 – Red 5mm (note the flat side = short pin)
- C1 – Ceramic capacitor 100nF (marking 104)
- C2 – Electrolytic capacitor 10uF (note the polarity)
- C3 – Electrolytic capacitor 100uF (note the polarity)
- SW3 – slide switch

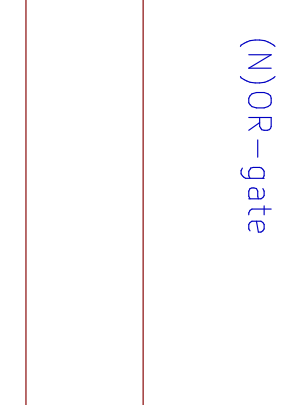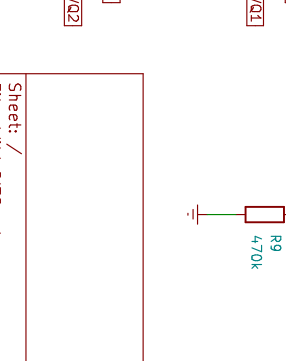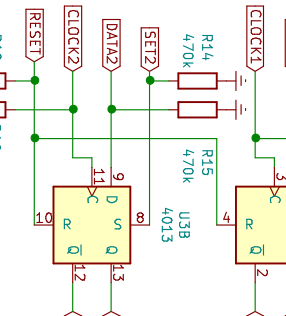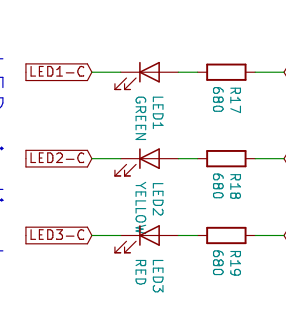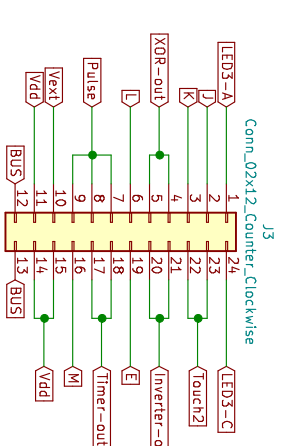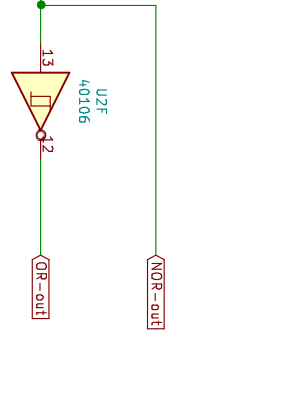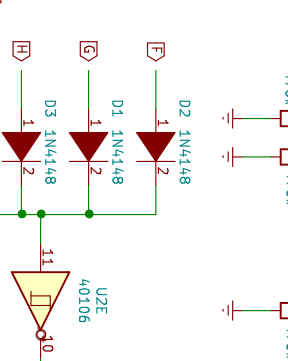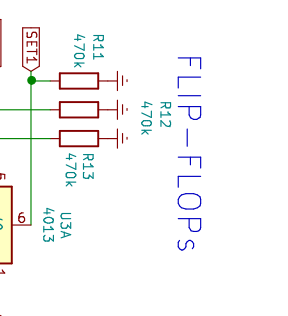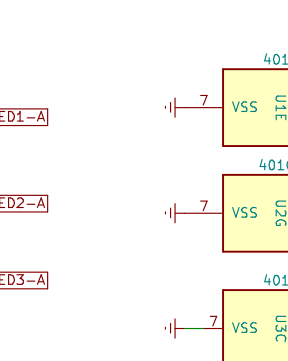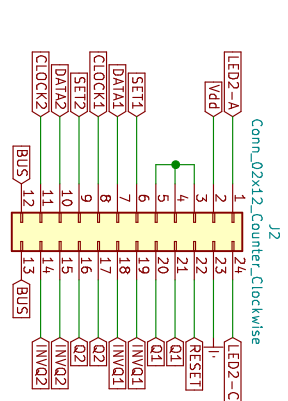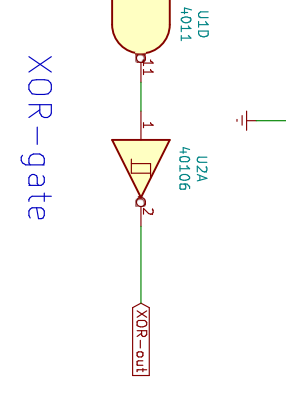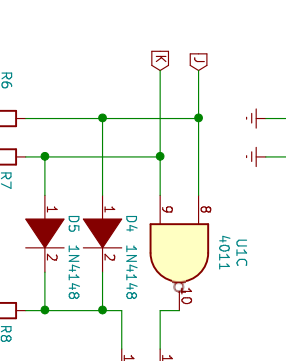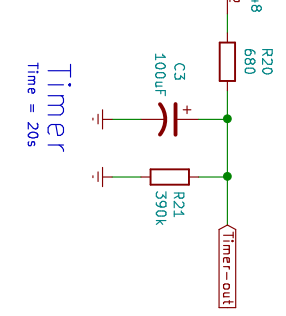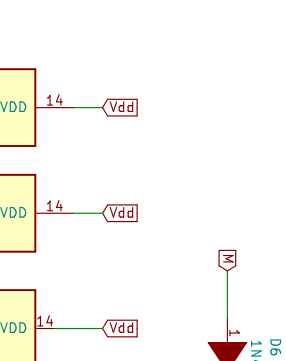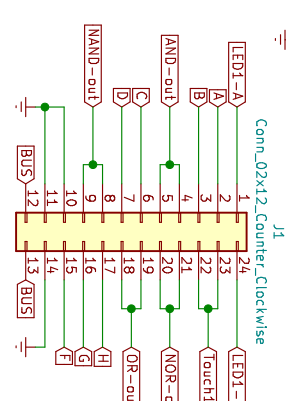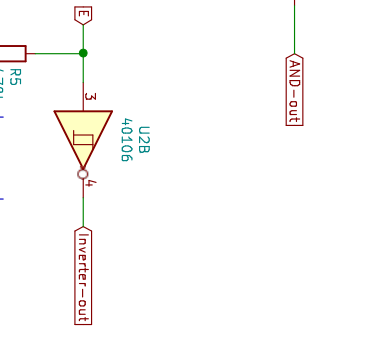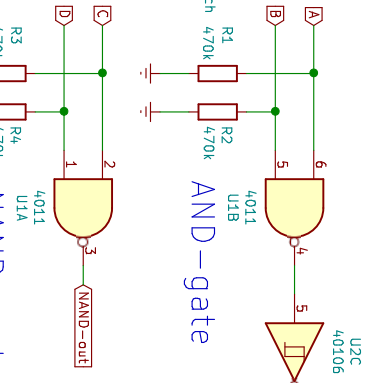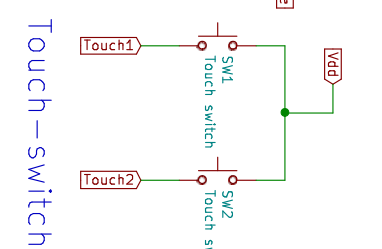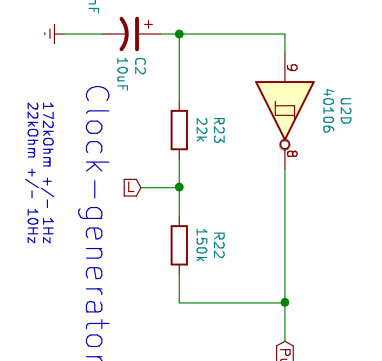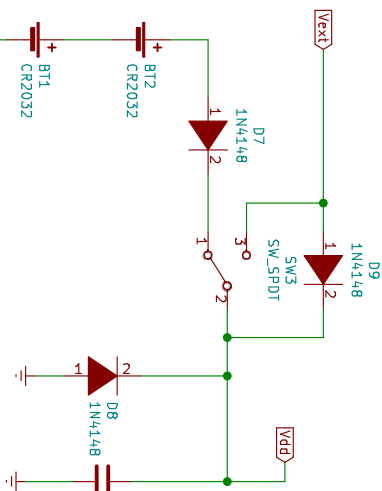

LED-indicators

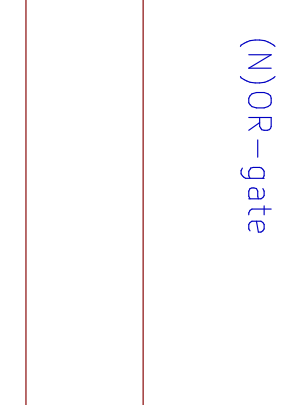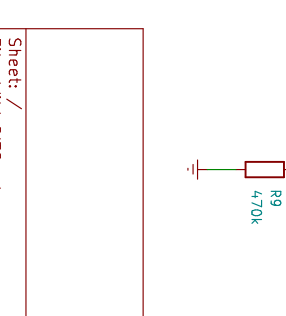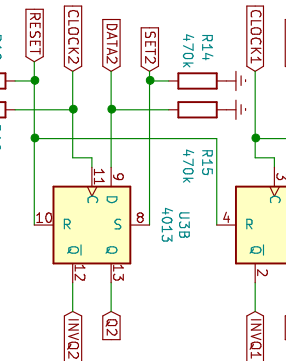

Sheet: /
File: Wild-BITS.sch
Title: Wild-BITS
Size: A4
Date: / /
Kicad E.D.A. kicad 5.1.2-f72e74a84ubuntu18.04.1
Rev: 1/1